



anovafurnishings.com
888.535.5005 tel

ASSEMBLY INSTRUCTIONS

Picnic Table with Single Pedestal and Surface Mount Plate

F1403– 46” Round Table, Expanded Steel, Traditional Edge Seats

F1404– 46” Square Table, Expanded Steel, Traditional Edge Seats

F1405– 46” Square Table, Expanded Steel, Rolled Edge Seats

D1404– 46” Square Table, Perforated Steel, Traditional Edge Seats

TOOLS NEEDED:

- Ratchet with 1/2” socket
- Ratchet with 3/4” socket
- 1/2” Open end or box end wrench
- 3/4” Open end or box end wrench
- Level




F1403 with Traditional Edge Seats



F1405 with Rolled Edge Seats

Tabletop, seat shape and pattern may vary.

TABLE COMPONENTS:

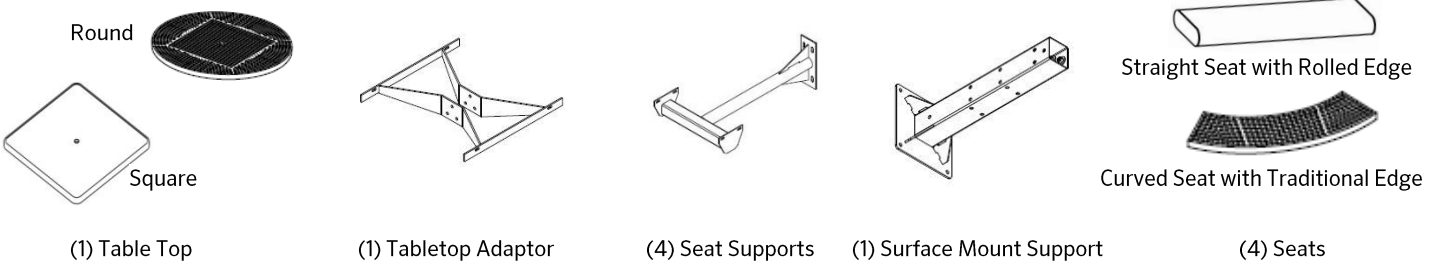


ASSEMBLY HARDWARE: All hardware is stainless steel.



ASSEMBLY:

The assembly is a two-person operation.

1. Inspect the shipping container contents for damage and to determine that all components and hardware are present.
2. Locate the surface mount support and the tabletop adaptor and lay them out on the packing cardboard or other soft surfaced workspace.
3. Align the mounting holes in the tabletop adaptor with the holes in the appropriate end of the surface mount support. Install one of the 1/2” flat washers onto one of the 1/2” x 1 1/2” hex head bolts and insert the bolt through both parts, with the bolt head on the outside surface of the surface mount support. Install a 1/2” flat washer and 1/2” hex nut on the inside end of the bolt. Use the ratchet with 3/4” socket and 3/4” wrench to tighten the hex nuts.

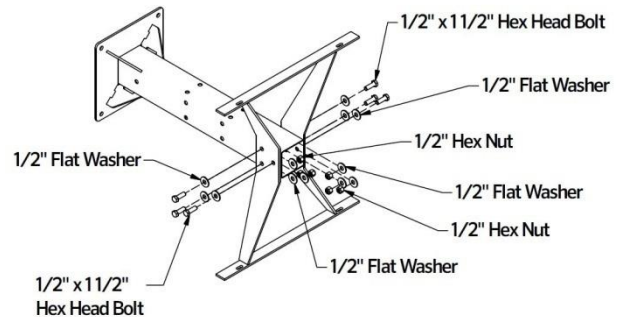

Repeat this for the other two mounting holes on the top side of the adaptor/support assembly.

Turn the assembly over and repeat for the three mounting holes on the other side of the assembly.

- Install the surface mount support to a prepared surface mount site. If the support is not secured, the assembly may tip or fall during the subsequent assembly steps.

Note: Tables must be surface mounted for stability.

- Place one of the seats upside down on the packing cardboard or other soft work surface. Position one of the seat supports so the mounting holes in the seat support line up with the mounting holes in the seat frame.

Place one of the 5/16" flat washers on one of the 5/16" x 1 1/4" hex head bolts and insert the bolt through the seat support and the seat frame mounting holes. Apply a 5/16" flat washer and a 5/16" hex nut to the end of the bolt and tighten finger tight.

Repeat for the other three mounting holes. After all bolts are installed, use the ratchet with 1/2" socket and 1/2" wrench to tighten the nuts.

Attach the remaining seats to the remaining seat supports in the same manner.

- Position two of the seat support assemblies on opposite sides of the surface mount support. Place a 1/2" flat washer onto one of the 1/2" x 5 1/2" hex head bolts and insert the bolt through the mounting holes on the surface mount support and both seat supports. Add a 1/2" flat washer and 1/2" hex nut to the end of the bolt and tighten the nut finger tight.

Repeat for the other three mounting holes in the seat support assemblies. After all bolts are installed, use the ratchet with 3/4" socket and 3/4" wrench to tighten the nuts.

Note: Check with a level and adjust the seats as needed while tightening.


Install the remaining seat support assemblies in the same manner.


- Position the tabletop adapter so that the mounting holes in the frame of the tabletop align with the mounting holes in the tabletop adapter. Place one of the 5/16" flat washers on one of the 5/16" x 1 1/4" hex head bolts and insert the bolt through the tabletop frame and the tabletop adapter mounting holes. Apply 5/16" flat washer and a 5/16" hex nut to the end of the bolt and tighten finger tight.

Repeat for the other three mounting holes in the tabletop and the tabletop adapter. After all bolts are installed, use the ratchet with 1/2" socket and 1/2" wrench to tighten the nuts.

Note: Check with a level while tightening the hardware and adjust the tabletop as needed while tightening.

- After two weeks, retighten all hardware.

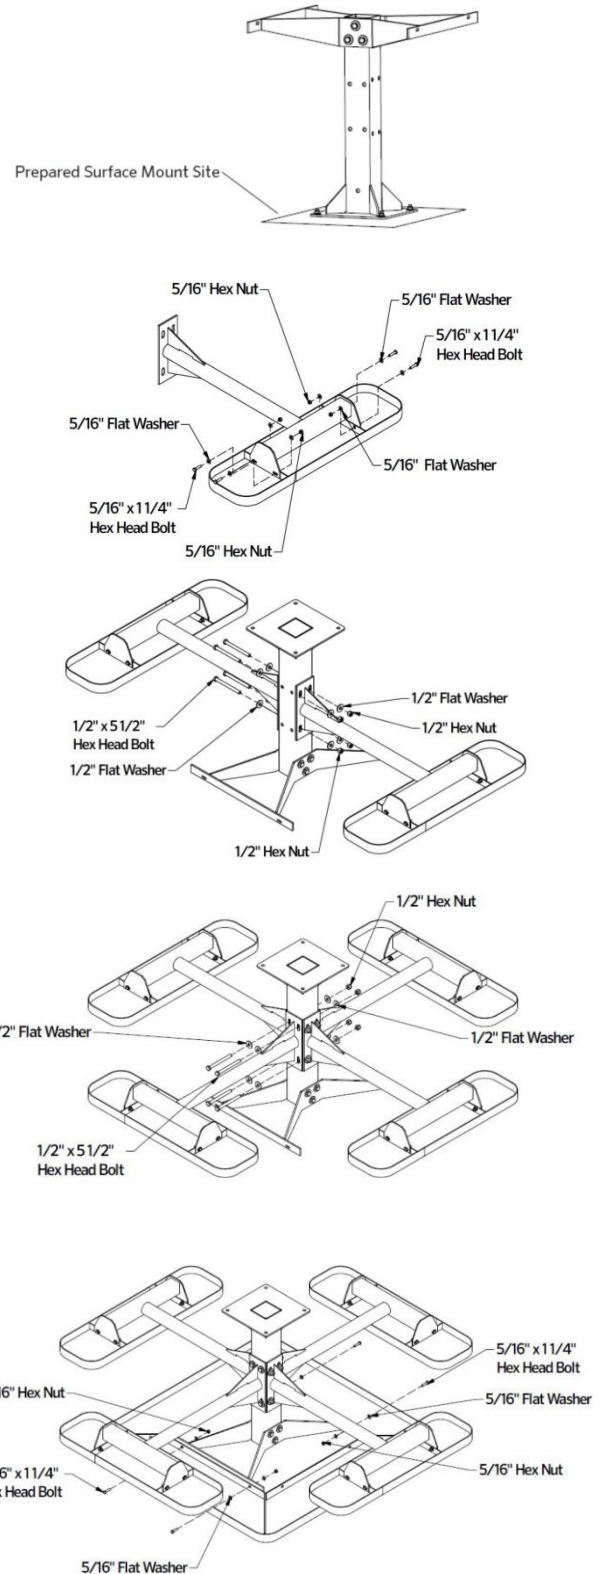

 WARNING	<ul style="list-style-type: none"> Furniture must not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability. Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced. Repairs must be made using only factory authorized parts and methods.
CARE AND MAINTENANCE	<ul style="list-style-type: none"> Do not drag the assembled unit across any surface. This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.