



anovafurnishings.com
888.535.5005 tel

ASSEMBLY INSTRUCTIONS

RALLY 32 GALLON RECEPTACLES

- D6004** with Contour Top
- D6005DT** with Dome Top
- D6005DTC** with Dome Top, Custom Plate
- D6005R** with Recycler Top
- D6005RC** with Recycler Top, Custom Words

Assembly Recommendations

To prevent scratching on any of the finished pieces, we recommend assembling the unit on packing material (paper and cardboard). Do not drag assembled unit on any surface. The assembly is a two-person operation.

Mounting Recommendations

For surface mounted products we recommend the use of stainless steel fasteners.
For inground mounted products follow the assembly instruction recommendations.

Cleaning Recommendations

For cleaning, use mild household cleansers or soap and water. Do not use vinyl cleansers or protectants.

Parts List

- 1 – Receptacle
- 1 – Liner and/or Lid:
(Not included with all models)

Hardware Included


- 1 – 1/4" X 1" Slotted Cap Screw
- 2 – 1/4" Washer
- 2 – 3/8" Washer
- 1 – 1/4" Nylock Nut

Tools Needed

- Flat-Head Screwdriver
- 7/16" Wrench



Lid attached to Receptacle with Nylon Web Tether

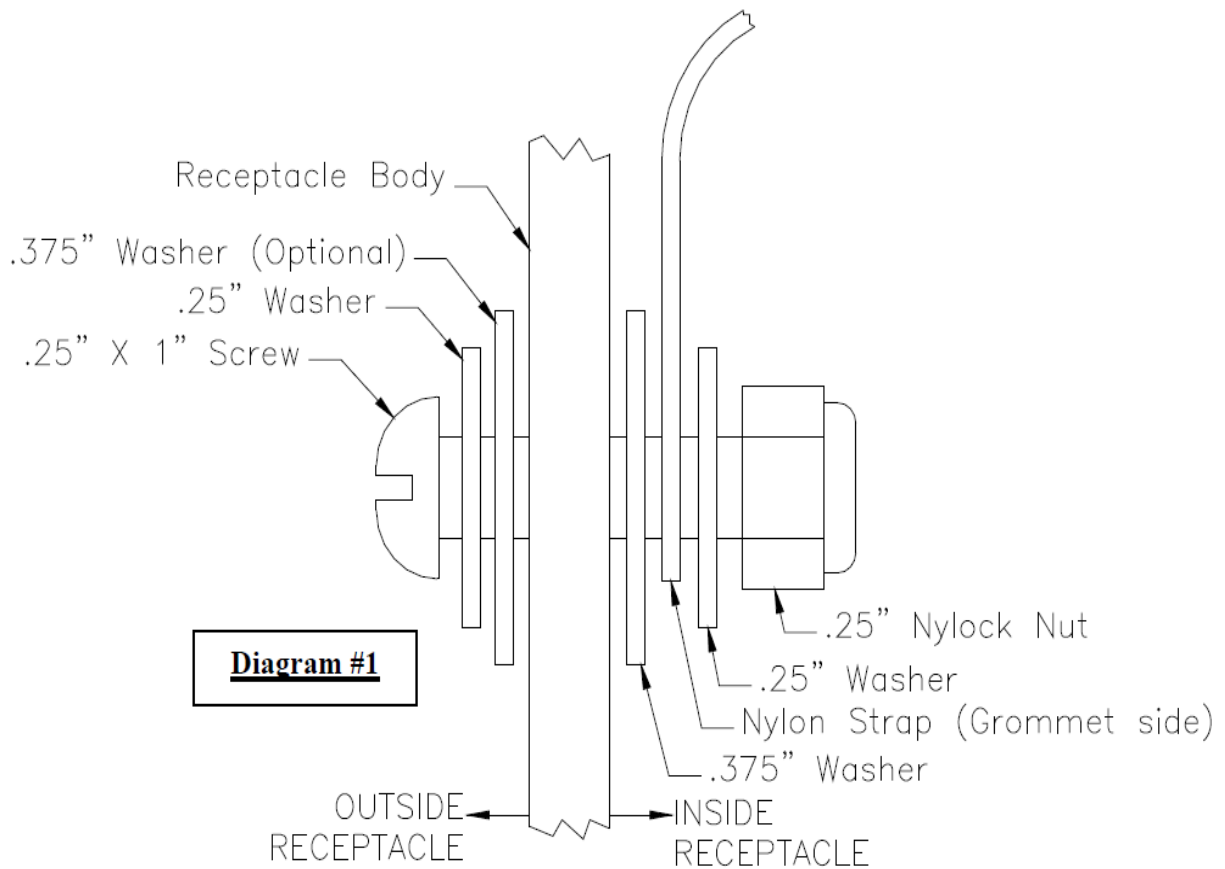

Note: Some units require the lid and/or liner to be purchased separately. These instructions can be used to attach a compatible lid to the Rally receptacle using the nylon web strap that was supplied with the lid. For lids supplied with a chain strap, use the attachment hardware included with the chain.

1. Place the receptacle in the appropriate location with the opening facing up.
2. Attach the grommet end of the fabric tether to the receptacle using one of the existing holes in the top portion of the receptacle as shown in Diagram #1 and in the photograph on the first page.
 - a. Place the .25" washer over the screw followed by the .375" washer (optional).
 - b. Insert the screw through a hole in the receptacle with the slotted head on the outside of the unit.
 - c. Place a .375" washer over the screw on the inside of the receptacle, followed by the Nylon strap (grommet side) and a .25" washer.
 - d. Place the Nylock nut on the end of the screw and tighten using the screwdriver and wrench.
3. Place the plastic liner (if applicable) inside the receptacle with the opening facing up.
4. Attach the spring snap on the end of the fabric tether to the tie-down ring on the lid as shown in the picture on the first page.
5. Place the lid on the receptacle.
6. Retighten all hardware two weeks after the initial assembly.



- Furniture must not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability.
- Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced.
- Repairs must be made using only factory authorized parts and methods.

CARE AND MAINTENANCE

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.