



anovafurnishings.com
888.535.5005 tel

- TOOLS NEEDED:**
- 7/16" Open End Wrench
 - 7/16" Hex Socket with Ratchet



Assembly Instructions

Infinity 4' Armrests


INF4ARM - Infinity 4' Armrest, Galvanized Steel Frame

INF4ARMR - Infinity 4' Recycled Plastic Armrest, Galvanized Steel Frame


INF4ARMT - Infinity 4' Thermory® Armrest, Galvanized Steel Frame

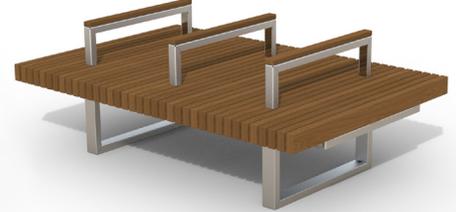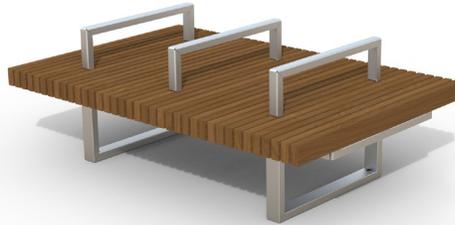


COMPONENT PARTS:

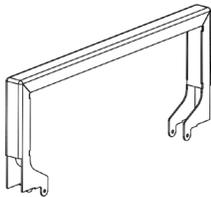

Armrest
Without Plank

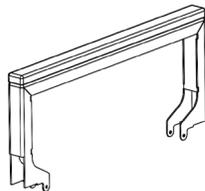


OR
Armrest
With Plank

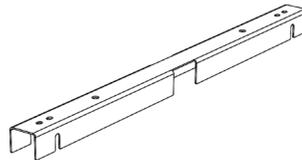


Under Bracket

ASSEMBLY HARDWARE: All hardware is stainless steel and the amount listed below is enough for one armrest.

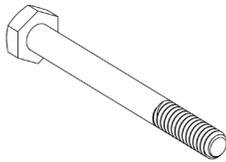


(2) 1/4"-20 x 2.5"
Hex Head Bolts



(4) 1/4" Flat Washers



(6) 1/4"-20 Hex Nuts



(2) 1/4"-20 U-Bolts

ASSEMBLY:


NOTE: Before assembling the nuts to the bolts, it is recommended that a light oil or petroleum jelly be applied to the screw threads.

Note: Assembly instructions are demonstrated using armrests with an integrated plank.

Armrest cannot be placed in the following locations:


- Over the 2 outermost end planks
- Over the boards on either side of a plank directly above a support.

Reference the image below any board that is grayed out should not have an armrest attached to it.

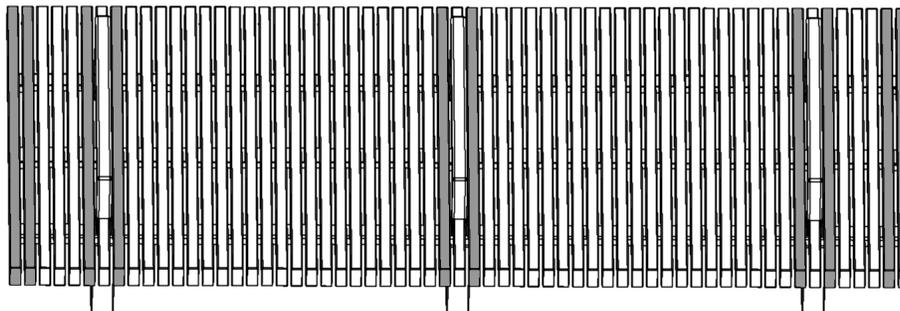



How to Assemble an Armrest Over Rectangular or U-Shaped Supports

1. Drop armrest down over the plank directly above the support so the tabs straddle the plank.

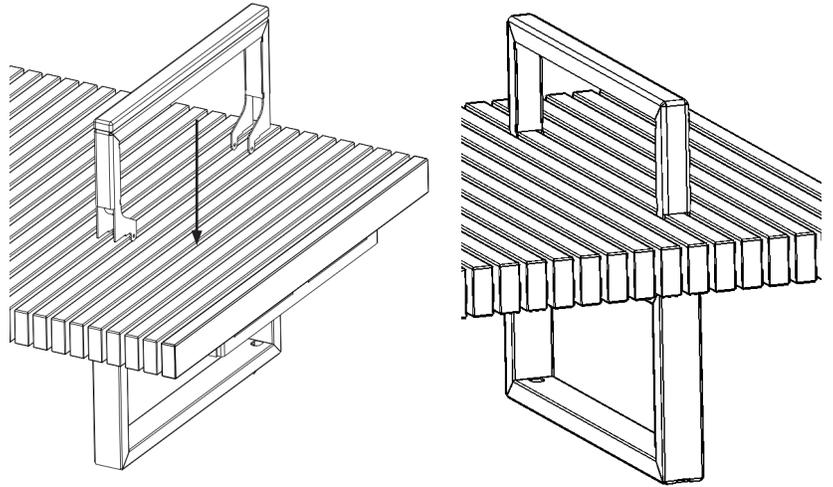

2. Align holes on armrest with holes on the support. Insert two 1/4"-20 x 2.5" bolts with washers through armrest and support.


1/4"-20 x 2.5" Bolts and 1/4" Washers

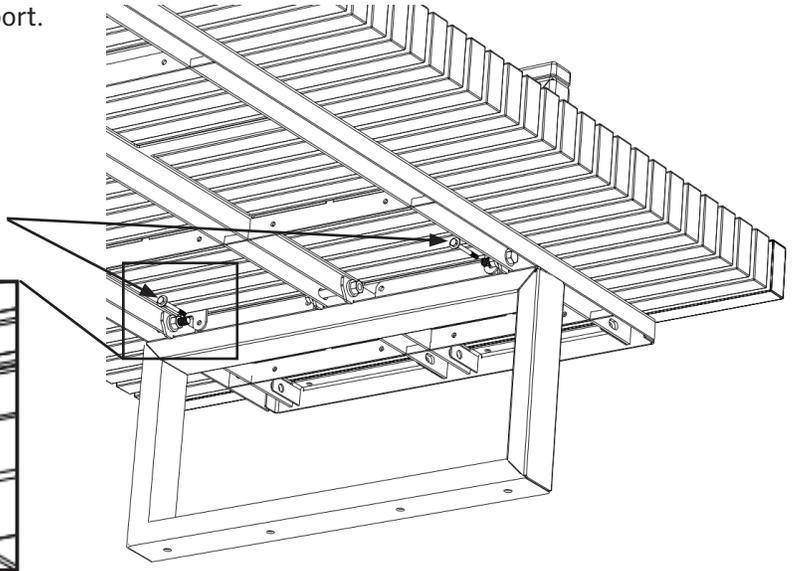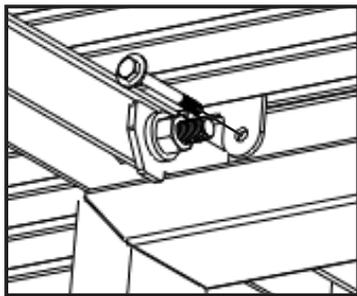


3. Place a 1/4"-20 nut and a 1/4" washer onto each of the bolts and tighten finger tight.

After all hardware is installed, tighten with a 7/16" wrench and 7/16" socket with a ratchet.

4. Discard the under bracket and all remaining hardware.
5. After two weeks, retighten all of the hardware.

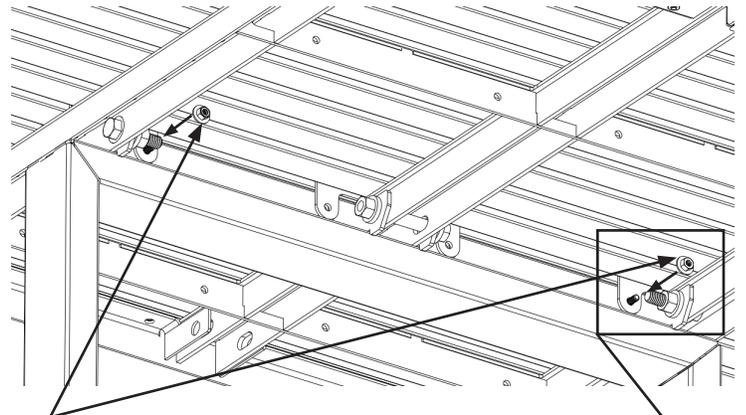


1/4"-20 Nuts and 1/4" Washers

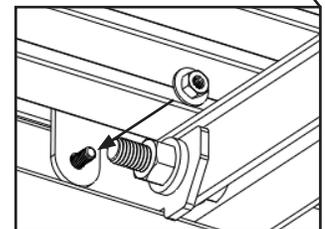


How to Assemble an Armrest Over a Non-Support Plank


1. Drop armrest down over the plank so the tabs straddle the plank.

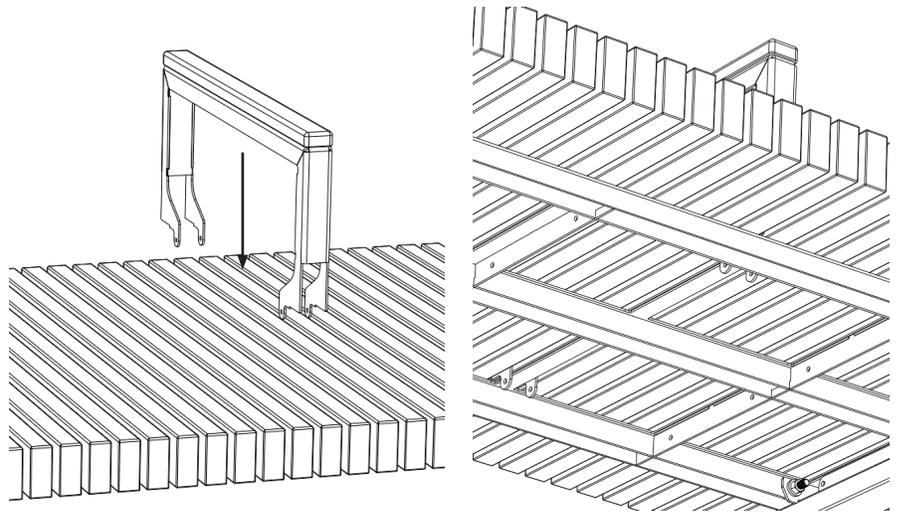


2. Locate under bracket and insert the threaded ends of the u-bolts through the holes in the bottom and attach the 1/4"-20 nuts provided loosely.

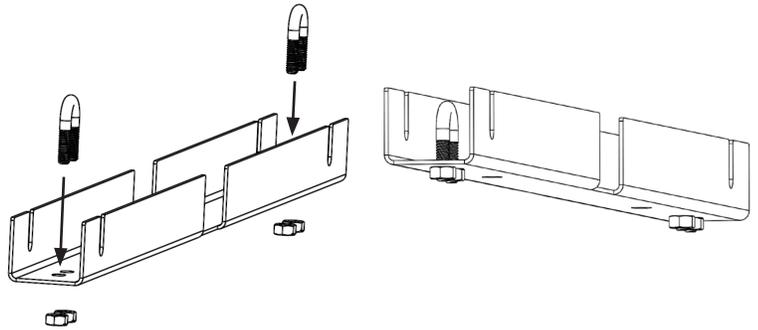


3. On the underside of the bench, slide the under bracket in between the tabs of the armrest and slide the bracket up until it makes contact with the under support of the bench.

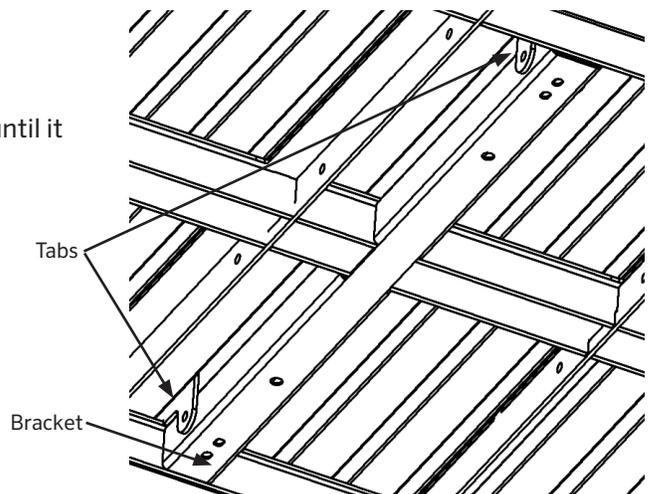


4. Locate a 1/4"-20 x 2.5" bolt and washer, guide them through the holes in the armrest and the slot on the under bracket while pushing up on the u-bolt so the 1/4"-20 2.5" bolt goes under the u-bolt. Repeat for the other side.

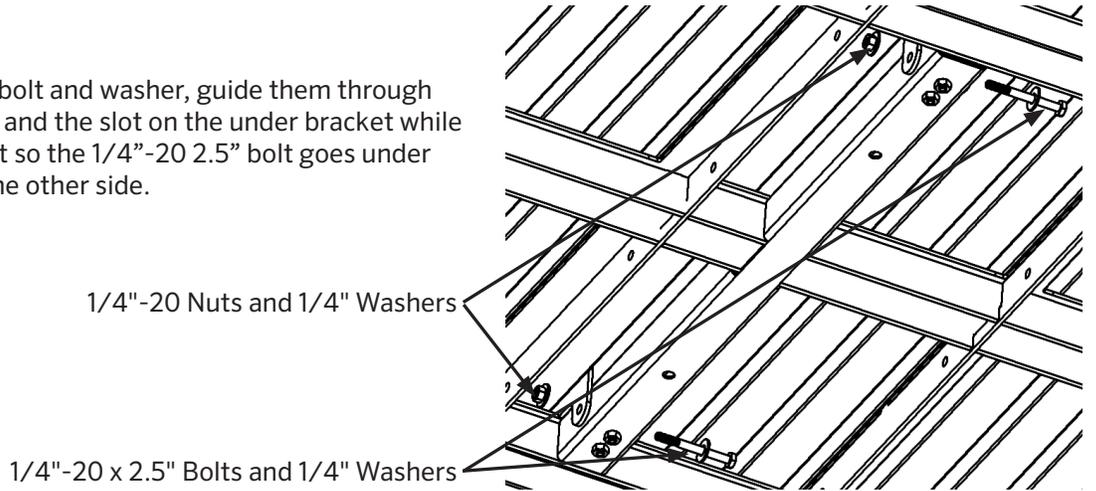


5. Secure the bolts with 1/4"-20 nuts and washers tighten finger tight.
6. Tighten the nuts on the u-bolts to provide clamping force.
7. Tighten the 1/4-20 x 2.5 bolts and nuts.
8. After two weeks, retighten all of the hardware.

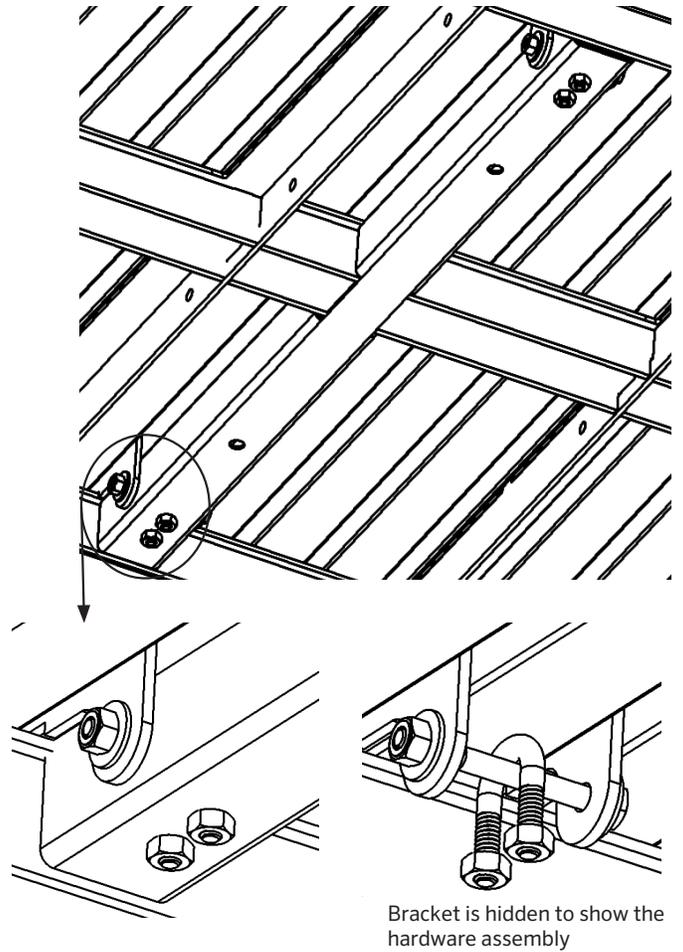


Replacement Parts

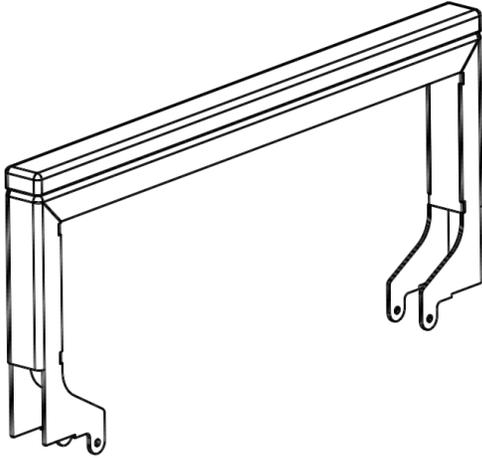

Armrest with integrated plank

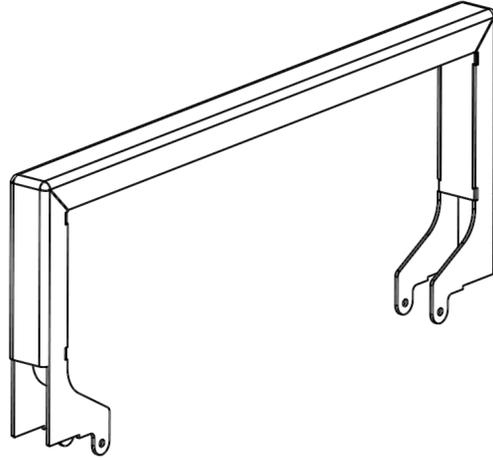

Armrest without a plank

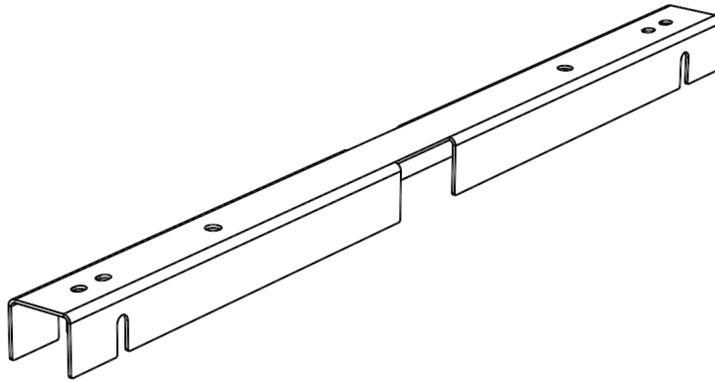

Under Bracket

Note: Please contact Customer Care at 1-866-797-1761 when ordering replacement parts.



WARNING

- Furniture must not be used other than for its intended purposes and should be inspected regularly for loose, missing, or broken hardware, and general instability.
- Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced.
- Repairs must be made using only factory authorized parts and methods.

CARE AND MAINTENANCE

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.