



Assembly Instructions

ADA Picnic Table with Single Pedestal and Surface Mount Plate

F1435 - 46" Square Table, Expanded Steel, 3-Traditional Edge Seats

D1405 - 46" Square Table, Perforated, 3-Traditional Edge Seats

F1402 - 46" Round Table, Expanded Steel, Traditional Edge Seats

anovafurnishings.com

888.535.5005 tel

TOOLS NEEDED:

- Ratchet with 1/2" socket
- Ratchet with 3/4" socket
- 1/2" Open-end or box-end wrench
- 3/4" Open-end or box-end wrench
- Level



F1402





D1405


TABLE COMPONENTS:




(1) Table Top

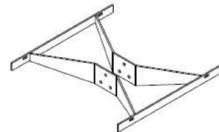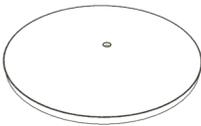

(1) Table Top Adapter

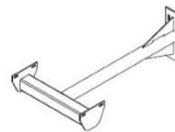

(3) Seat Supports

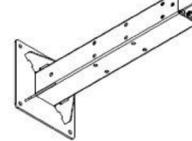

(1) Surface Mount Support



(3) Seats

ASSEMBLY HARDWARE: All hardware is stainless steel.



(8) 1/2" x 5 1/2"
Hex Head Bolts



(6) 1/2" x 11/2"
Hex Head Bolts



(16) 1/2" x 11/4"
Hex Head Bolts



(28) 1/2" Flat
Washers



(32) 5/16" Flat
Washers



(14) 1/2"-13"
Nylock Nuts



(16) 5/16"-18"
Nylock Nuts

ASSEMBLY:

The assembly is a two-person operation.


1. Inspect the shipping container contents for damage and to determine that all components and hardware are present.

NOTE: Before assembling the nuts to the bolts, it is recommended that a light oil or petroleum jelly be applied to the screw threads.

2. Locate the surface mount support and the tabletop adapter and lay them out on the packaging cardboard or other soft surfaced workspace.
3. Align the mounting holes in the tabletop adapter with the holes in the appropriate end of the surface mount support. Install one of the 1/2" flat washers onto one of the 1/2" x 11/2" hex head bolts and insert the bolt through both parts, with the bolt head on the outside surface of the surface mount support. Install a 1/2" flat washer and 1/2" nylock nut on the inside end of the bolt. Use the ratchet with 3/4" socket and 3/4" wrench to tighten the nuts.


Repeat this for the other two mounting holes on the top side of the adapter/support assembly.

Turn the assembly over and repeat for the three mounting holes on the other side of the assembly.

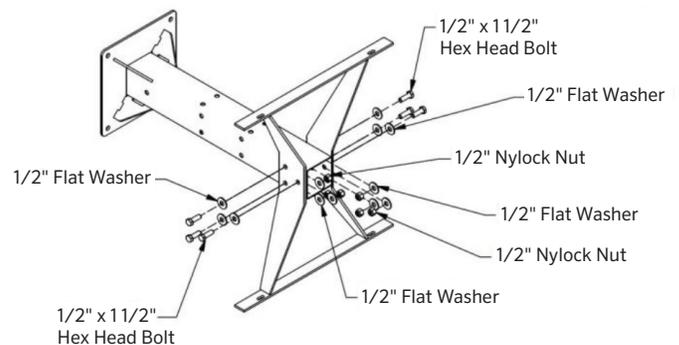

- Install the surface mount support to a prepared surface mount site. If the support is not secured, the assembly may tip or fall during the subsequent assembly steps.


Note: Tables must be surface mounted for stability and to comply with warranty and Federal ADA regulations.

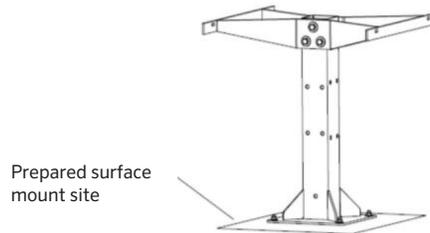

- Place one of the seats upside down on the packing cardboard or other soft work surface. Position one of the seat supports so the mounting holes in the seat support line up with the mounting holes in the seat frame. Place one of the 5/16" flat washers on one of the 5/16" x 1 1/4" hex head bolts and insert the bolt through the seat support and the seat frame mounting holes. Apply a 5/16" flat washer and a 5/16" hex nut to the end of the bolt and tighten finger tight.

Repeat for the other three mounting holes. After all bolts are installed, use the ratchet with 1/2" socket and 1/2" wrench to tighten the nuts.

Attach the remaining seats to the remaining seat supports in the same manner.

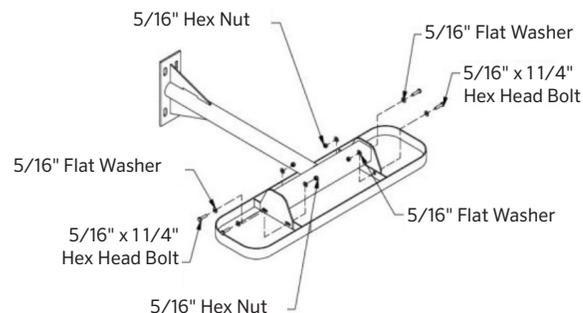


- Position two of the seat support assemblies on opposite sides of the surface mount support. Place a 1/2" flat washer onto one of the 1/2" x 5 1/2" hex head bolts and insert the bolt through the mounting holes on the surface mount support and both seat supports. Add a 1/2" flat washer and 1/2" nylock nut to the end of the bolt and tighten the nut finger tight.

Repeat for the other three mounting holes in the seat support assemblies. After all bolts are installed, use the ratchet with 3/4" socket and 3/4" wrench to tighten the nuts.

Note: Check with a level and adjust the seats as needed while tightening.

Install the remaining seat support assembly in the same manner.


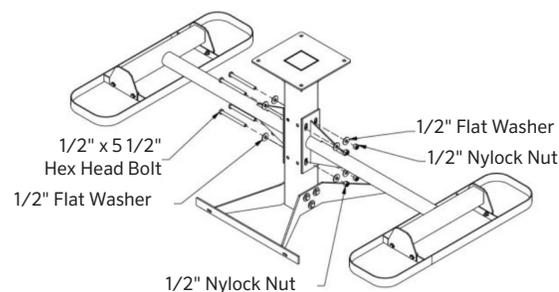


- Position the tabletop adapter so that the mounting holes in the frame of the tabletop align with the mounting holes in the tabletop adapter. Place one of the 5/16" flat washers on one of the 5/16" x 1 1/4" hex head bolts and insert the bolt through the tabletop frame and the tabletop adapter mounting holes. Apply 5/16" flat washer and a 5/16" hex nut to the end of the bolt and tighten finger tight.

Repeat for the other three mounting holes in the tabletop and the tabletop adapter. After all bolts are installed, use the ratchet with 1/2" socket and 1/2" wrench to tighten the nuts.

Note: Check with a level while tightening the hardware and adjust the tabletop as needed while tightening.

- After two weeks, retighten all hardware.

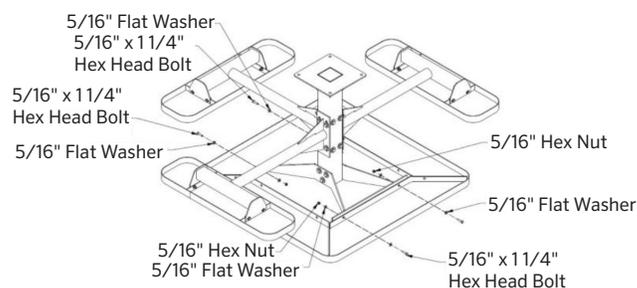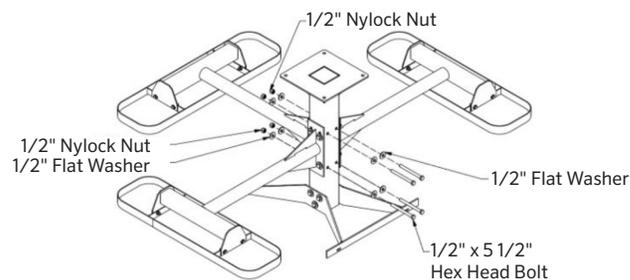

Note: Please contact Customer Care at 1-866-797-1761 when ordering replacement parts.



- Furniture must not be used other than for its intended purposes and should be inspected regularly for loose, missing, or broken hardware, and general instability.
- Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced.
- Repairs must be made using only factory authorized parts and methods.

CARE AND MAINTENANCE

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.